



**CUTBACK  
MOTORCYCLES**

---

## Installation Instructions >> Skid Plate >> Africa Twin 1000

---

**Important: In case you have purchased our**  
**- Crash Guards Combo**  
**- Ultimate Protection Combo**  
**- or Ultimate Protection Combo MAX**

**Please note that the first item to install is the crash bars, second is the engine guards, third is the skid plate and the final piece is the upper crash bars.**  
**Some installation steps of the crash bars and engine guards merge.**



1.

---

## Installation Instructions >> Crash Bars >> Africa Twin 1000

---

1. After removing the factory skid plate, proceed with removing the bolt in the middle of the skid plate mount using a 12mm socket and ratchet. Ratchet extension is optional.



2. Take the supplied skid plate mount cross brace and place it on the frame underneath the engine.



2.

# COLT®FACTORY MOTORCYCLE

---

3. Line it up with the mounting hole in the center or the factory skid plate mount. Re-insert the factory bolt by hand-threading it.



4. Mount the skid plate. First insert the two M8 button head Allen bolts with the washers, handthread and gently tighten using a 5mm Allen key or 5mm Allen socket. Leave it loose.



3.


# COLT®FACTORY MOTORCYCLE

---

5. Now, go ahead and line up the mounting holes on the bottom of the skid plate, and insert the supplied flat head M8 Allen bolts. Hand-thread both of them first, and then tighten using a 5mm Allen key or 5mm Allen socket.



6. Tighten the skid plate mount bracket bolt now using a 12mm socket and ratchet. Factory recommended torque specs 44Nm.

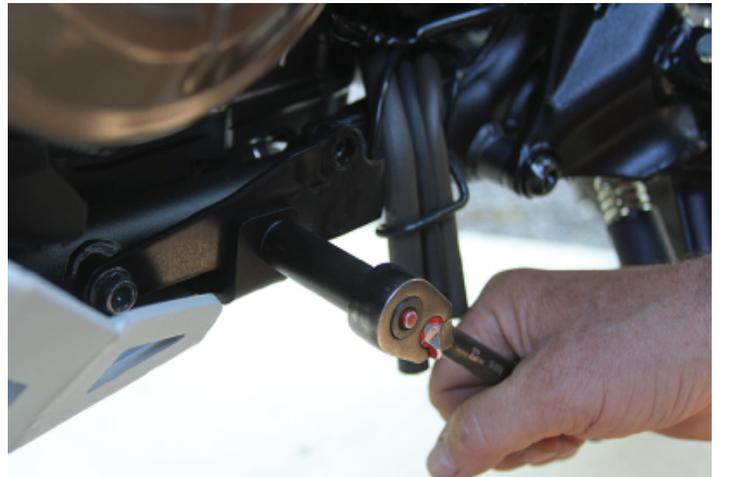

4.

---

---

# Installation Instructions >> Crash Bars >> Africa Twin 1000

---

7. Finally, go ahead and tighten all the bolts and nuts to the required torque specs and make sure to check again after going out for a test ride.

**Congratulations! You've completed installing your Outback Motortek product.**



Should you have any question regarding the installation, please contact us at [info@outbackmotortek.com](mailto:info@outbackmotortek.com)

or call toll free at 1 877 931 3636

**Important note!** Outback Motortek recommends its customer to install their products by a certified, experienced motorcycle mechanic. Outback Motortek assumes no liability for any accident, injury, death, loss, or other claim related to or resulting from the use of its products. In no event shall Outback Motortek be liable for incidental or consequential damages relating to or resulting from the use of its product or any of its parts. 5

## Recommended tools and supplied hardware



1. Ratchet
2. Ratchet extension
3. 5mm Allen key
4. 12mm socket
5. 5mm Allen socket
6. M8x16mm flat head Allen bolts
7. M8x20mm button head Allen bolts  
+washers