


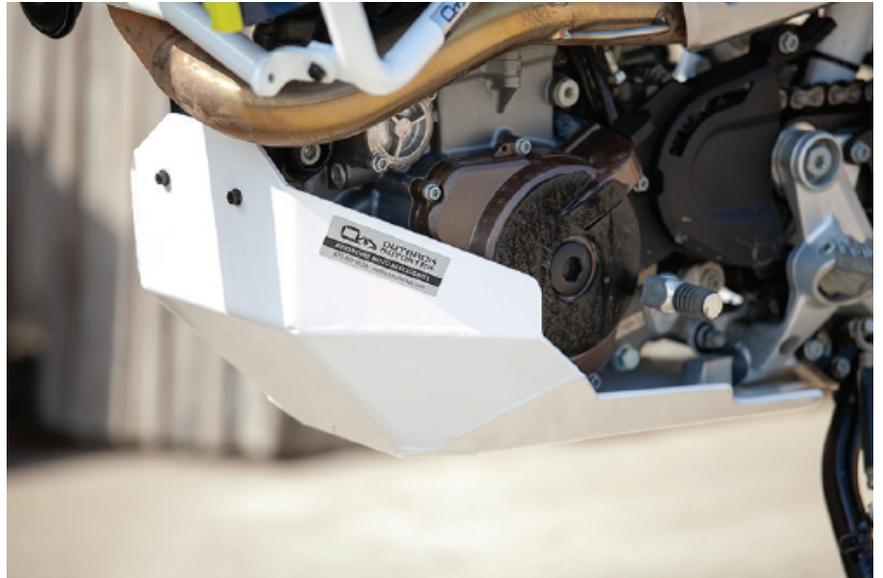

Installation Manual >> Skid Plate >> Husqvarna 701 Enduro

See attached pages for product kit,
recommended tools.



1.

Installation Manual >> Skid Plate >> Husqvarna 701 Enduro

1. Mount the supplied front bracket.



2. Secure it on the frame's mounting points by
hand threading the supplied hexagon head bolts on
both sides.



2.

OUTBACK MOTORCYCLE

3. Use a 10mm socket or wrench to tighten the bolts.



4. Make sure the bracket is loose enough to line up the mounting holes on the bracket and the skid plate.



3.

OUTBACK MOTORCYCLE

5. Time to install the supplied rear brackets. Make sure the 45 degree cut off faces inside.



6. Hand thread the supplied M6 Allen bolts through the bottom.



4.

Installation Manual >> Skid Plate >> Husqvarna 701 Enduro

7. Tighten all four bolts using 4mm Allen key or socket.



8. Make sure the tabs are facing backwards with the cut-offs facing inwards.



5.

Installation Manual >> Skid Plate >> Husqvarna 701 Enduro

9. Insert the rubber grommets on the round ends of the tabs and mount the skid plate.



10. Hand thread the supplied M6 hex/torx bolts after lining up the mounting holes on the skid plate and the frame mounted bracket. Tighten the bolts using 10mm socket or wrench or torx key.



6.

11. Finally, go ahead and tighten all the bolts and nuts to torque specs and make sure to check again after going out for a test ride.



Should you have any question regarding the installation, please contact us at info@outbackmotortek.com

or call toll free at 1 877 931 3636

Important note! Outback Motortek recommends its customer to install their products by a certified, experienced motorcycle mechanic. Outback Motortek assumes no liability for any accident, injury, death, loss, or other claim related to or resulting from the use of its products. In no event shall Outback Motortek be liable for incidental or consequential damages relating to or resulting from the use of its product or any of its parts.

7.