



OUTBACK MOTORTECH

KTM 690 Enduro R

ASSEMBLY GUIDE | SKID PLATE


Tools Required

- Ratchet + Extension
- 5mm Allen Socket
- 17mm Socket
- Blue Loctite (recommended)


Number	QTY	Hardware Specifications	Torque (NM)
<u>1</u>	2	OEM M10 Bolt	*
<u>2</u>	4	M6 x 20mm Counter Sunk Allen Bolt	10
<u>3</u>	2	M6 x 20mm Allen Bolt	10
<u>4</u>	2	M6 Washer	-

* PLEASE REFER TO THE OWNER'S (OR SERVICE) MANUAL FOR OEM TORQUE SPECIFICATIONS.*


STEP 1 (Remove OEM Hardware L + R):

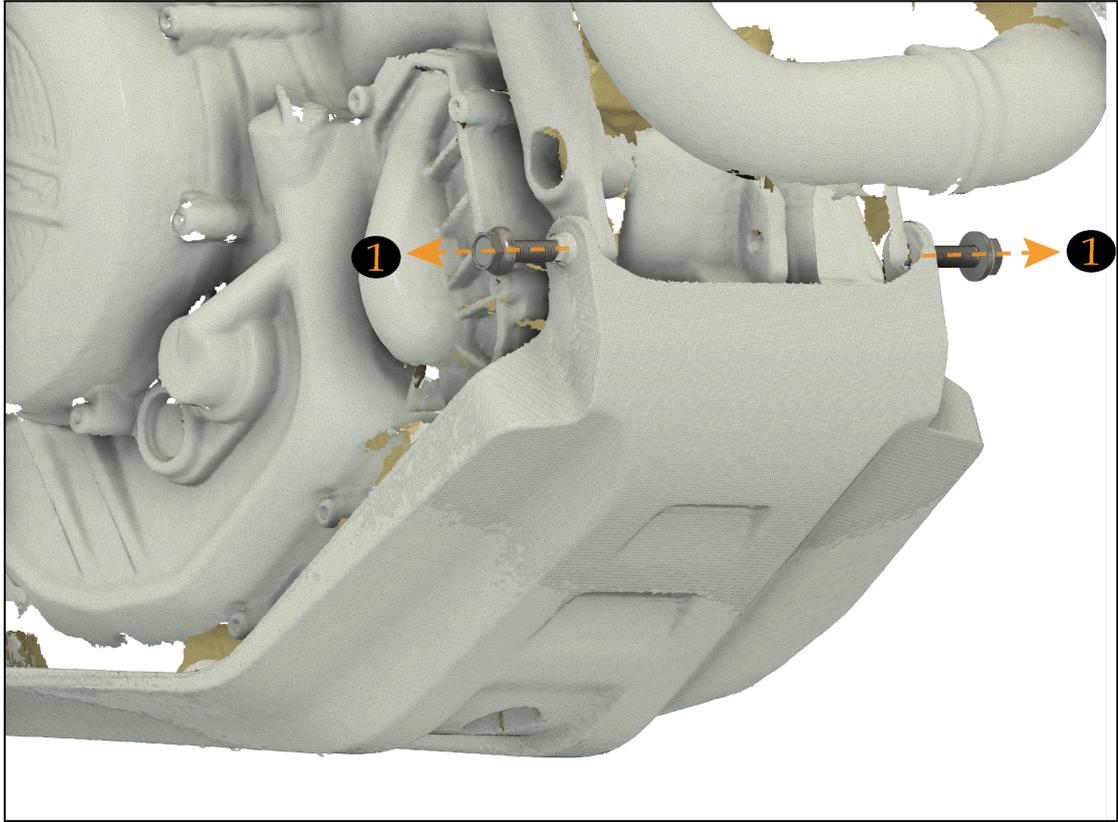


STEP 2 (Install Front Mount W/OEM Hardware) :

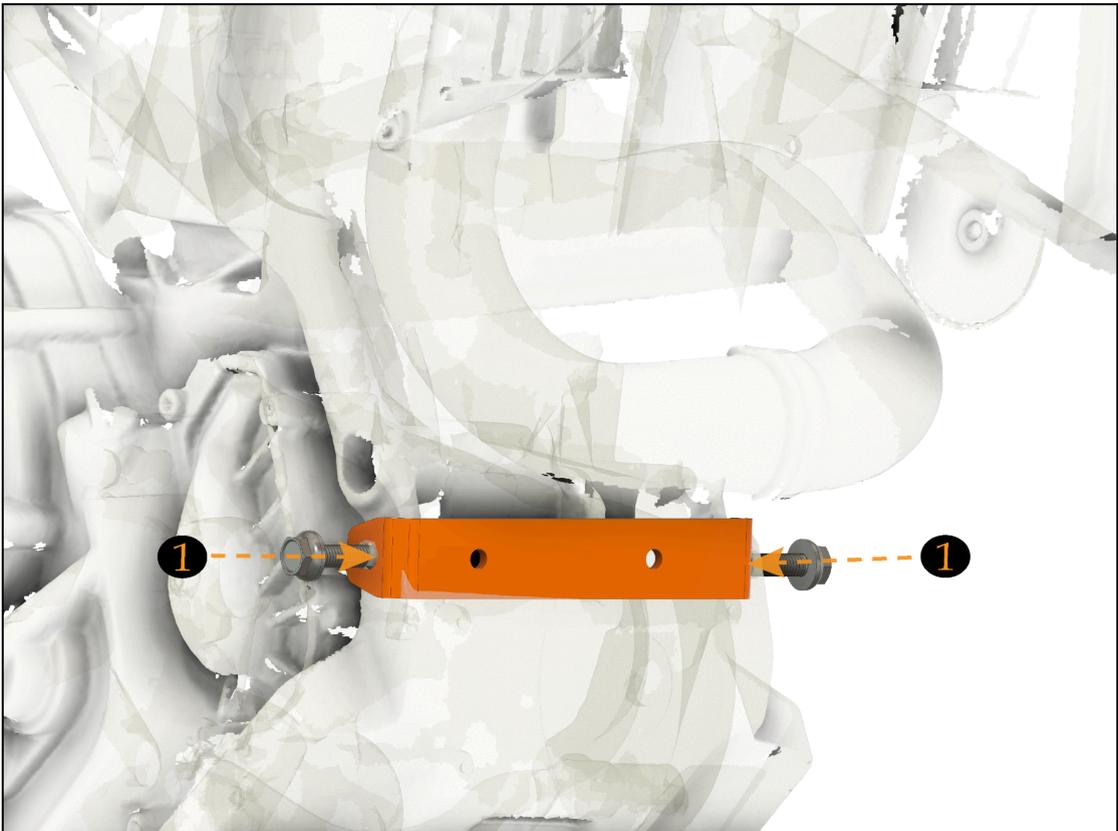

STEP 3 (Rear Mount) :

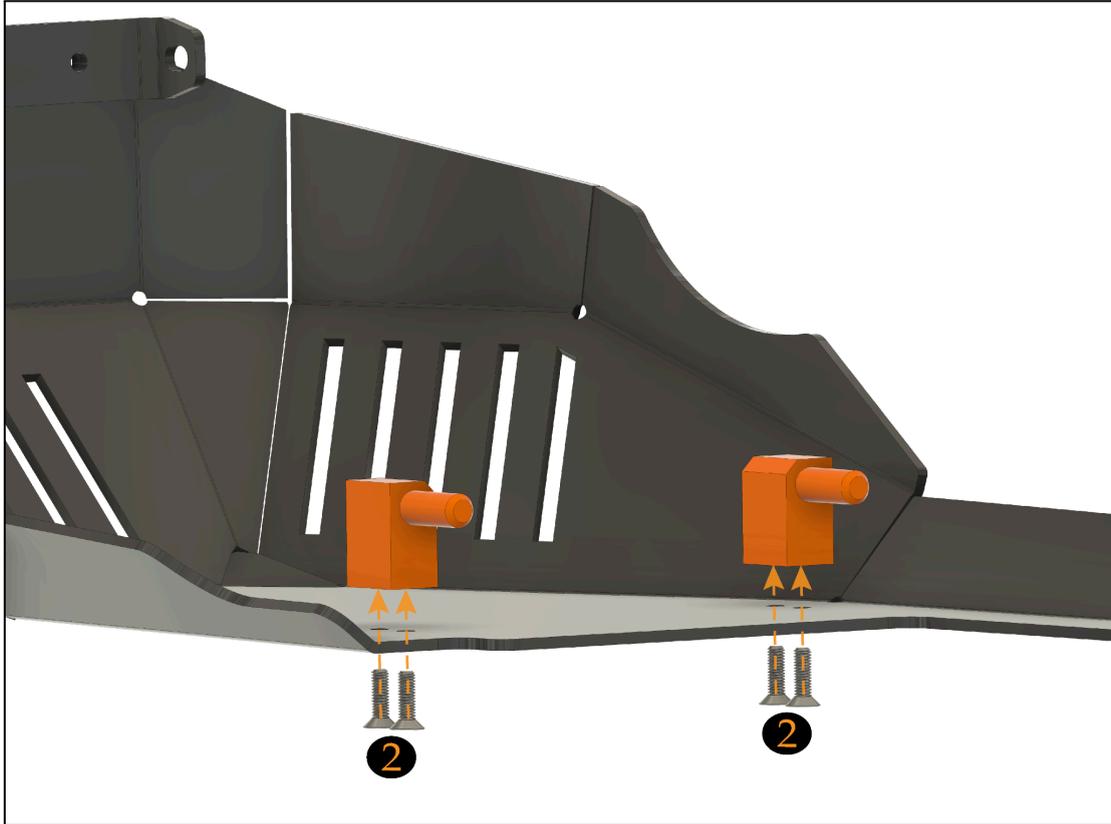

STEP 4 (Attach Skid Plate To Front Mount) :

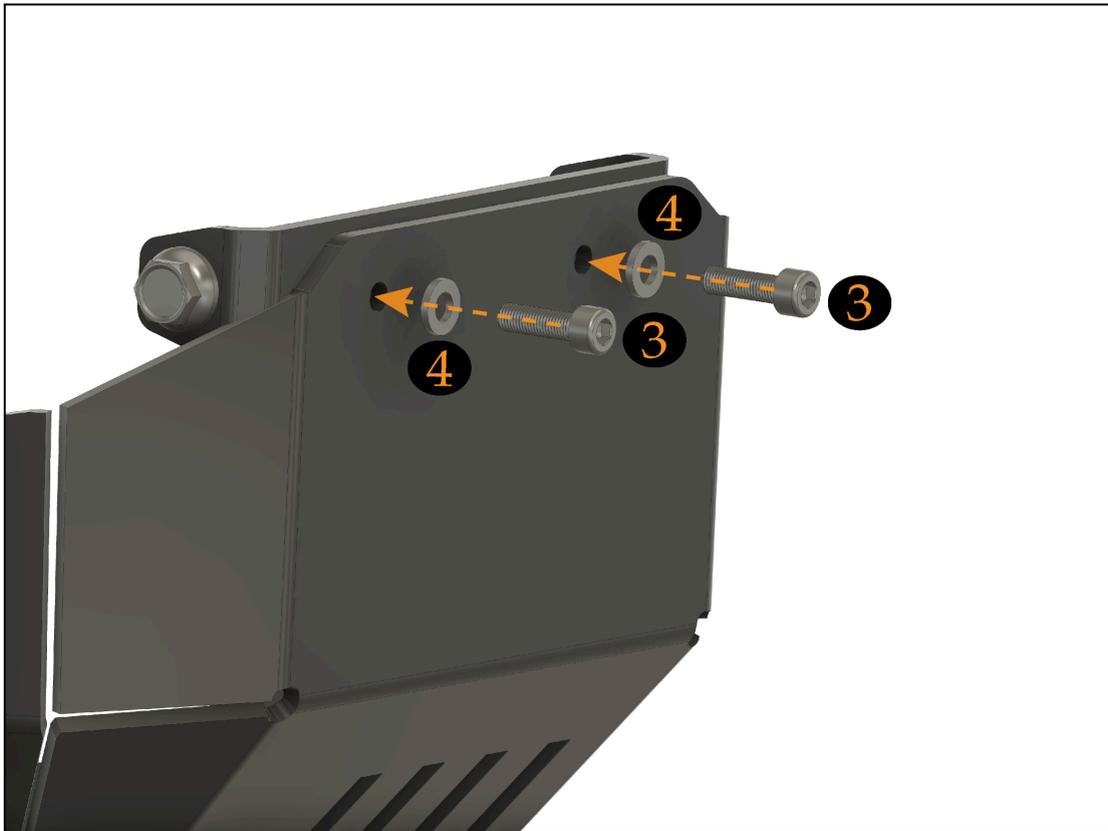

*** Torque Disclaimer ***

Torque specs provided by Outback Motortek are for guidance only and may reference OEM data. Incorrect torque application from miscalibrated or improperly stored torque wrenches (which can drift by up to 20% within 12 months) may cause broken studs or mounting failures. Always return torque wrenches to 0 ft-lbs when storing, and use blue Loctite (medium strength) on all fasteners to help prevent loosening. Outback Motortek is not responsible for damage or failures caused by mis-torquing or improper installation.