



**COLT EBFACI4  
MOT-CRTEI4**

## 2026 KTM 690 Enduro R

### ASSEMBLY GUIDE | **CRASH BARS**


#### **Tools Required**

- ☐ Ratchet + Extension
- ☐ 5mm Allen Socket
- ☐ 8mm Allen Socket
- ☐ Blue Loctite (recommended)


| Number   | QTY | Hardware Specifications | Torque (NM) |
|----------|-----|-------------------------|-------------|
| <u>1</u> | 4   | M10 x 40mm Allen Bolt   | *           |
| <u>2</u> | 2   | M6 x 20mm Allen Bolt    | <b>10</b>   |
| <u>3</u> | 4   | M6 Washer               | -           |
| <u>4</u> | 2   | M6 Nyloc Nut            | -           |

\* PLEASE REFER TO THE OWNER'S (OR SERVICE) MANUAL FOR OEM TORQUE SPECIFICATIONS.\*


**STEP 1 (Install Right Side Crash Bar):**

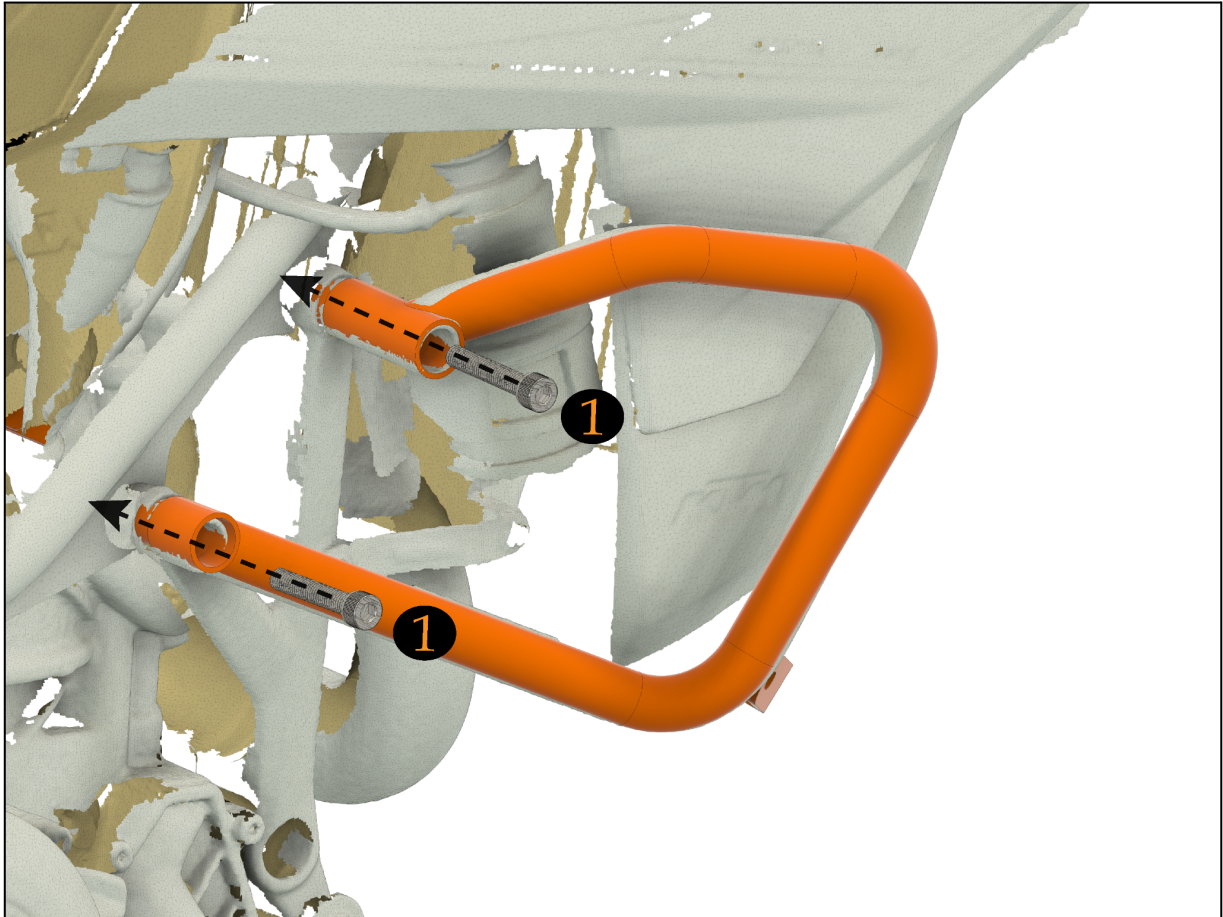

**STEP 2 (Install Left Side Crash Bars) :**

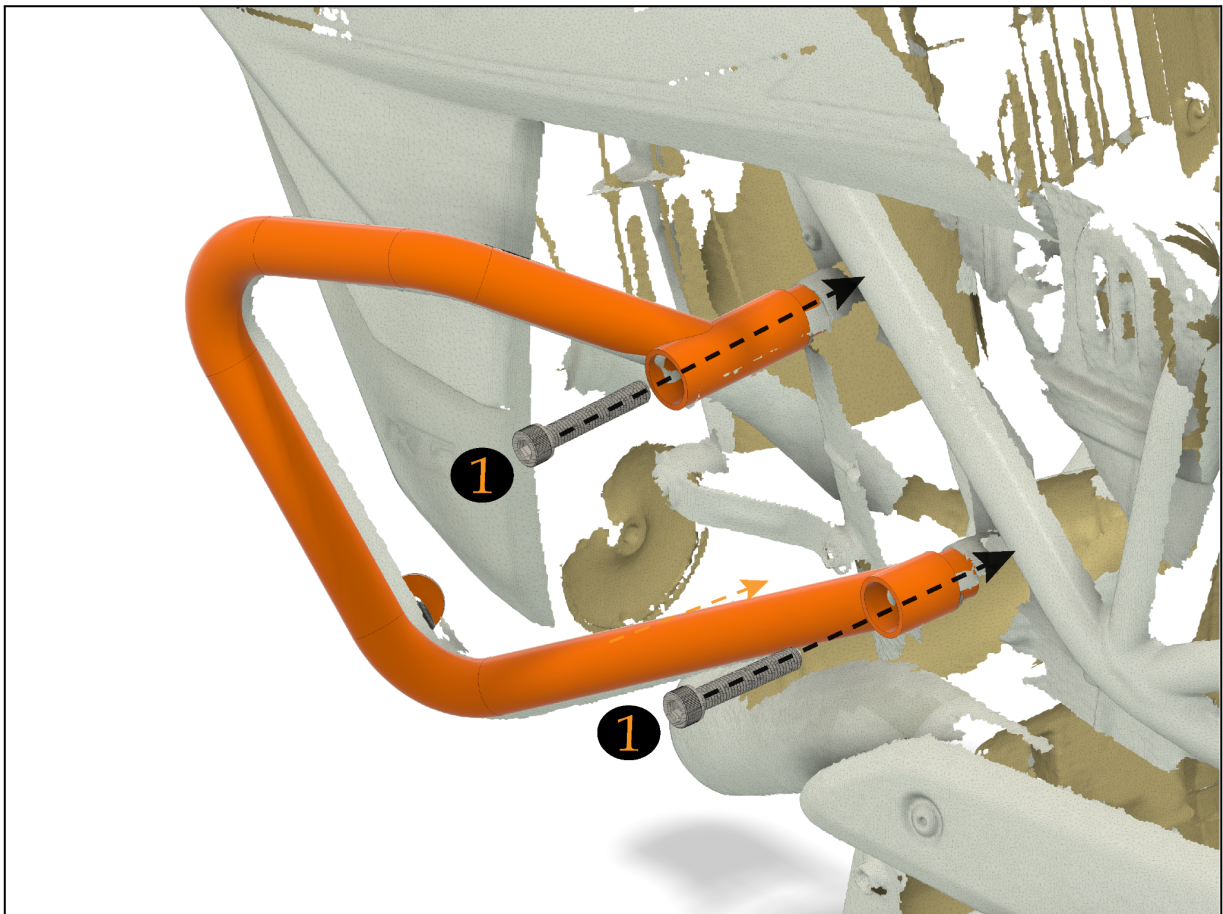

### STEP 3 (Cross Brace) :

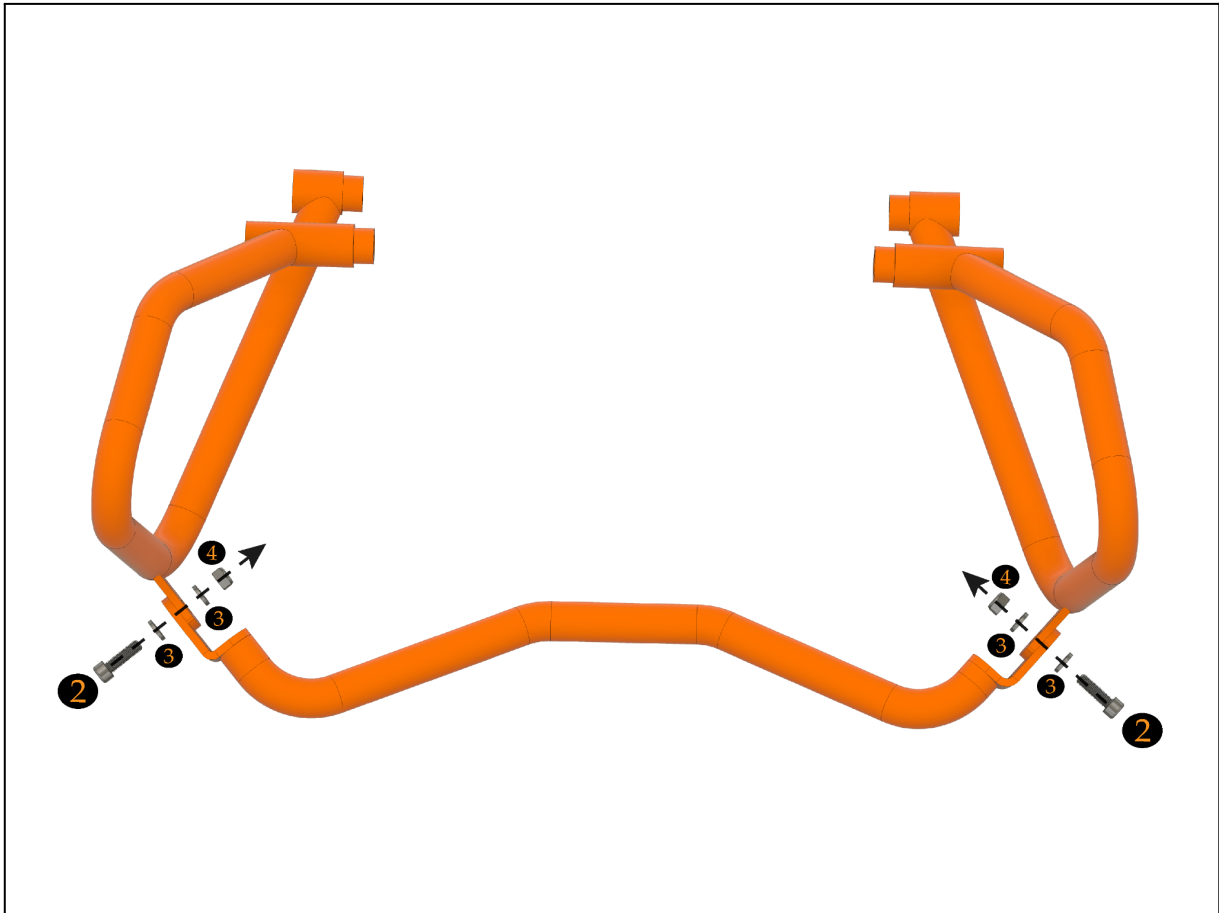

#### **\* Torque Disclaimer \***

Torque specs provided by Outback Motortek are for guidance only and may reference OEM data. Incorrect torque application from miscalibrated or improperly stored torque wrenches (which can drift by up to 20% within 12 months) may cause broken studs or mounting failures. Always return torque wrenches to 0 ft-lbs when storing, and use blue Loctite (medium strength) on all fasteners to help prevent loosening. Outback Motortek is not responsible for damage or failures caused by mis-torquing or improper installation.