2026 Ducati Desert X V2

ASSEMBLY GUIDE | PANNIER RACKS

Tools Required


- ☐ Ratchet + Extension
- ☐ 5mm Allen Key / Hex Socket *(for M6 hardware)*
- ☐ 6mm Allen Key / Hex Socket *(for M8 hardware)*
- ☐ *10mm Wrench/ Spanner (for M6 Nyloc Nut)*
- ☐ Torque Wrench *(Optional)*
- ☐ Blue Loctite *(recommended)*

Number	QTY	Specifications	Torque (NM)
1	4	OEM Hardware	*
2	2	5mm Footpeg Spacers	-
3	4	M8 x 20mm Allen Bolt	*
4	4	M8 Washer	-
5	4	M6 x 20mm Allen Bolt	10
6	8	M6 Washer	-
7	4	M6 Nyloc Nut	-


Refer to Step 4 if installing with Rear Rack Combo

***** PLEASE REFER TO THE OWNER'S (OR SERVICE) MANUAL FOR **OEM** TORQUE SPECIFICATIONS.*****


STEP 1 (Remove/Loosen Both OEM Footpegs ~ 5mm+ gap required) :

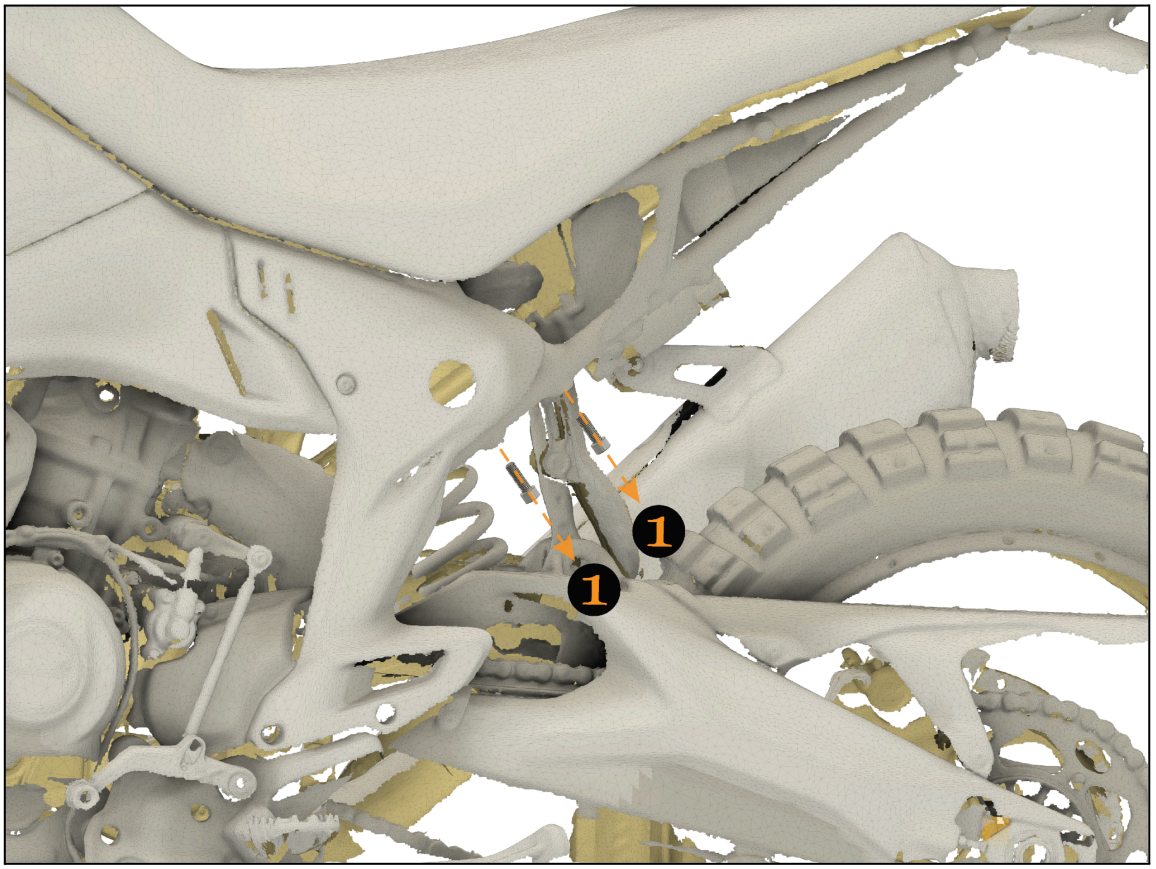


STEP 2 (Install Right Side Pannier Rack - Left + Right Identical) :

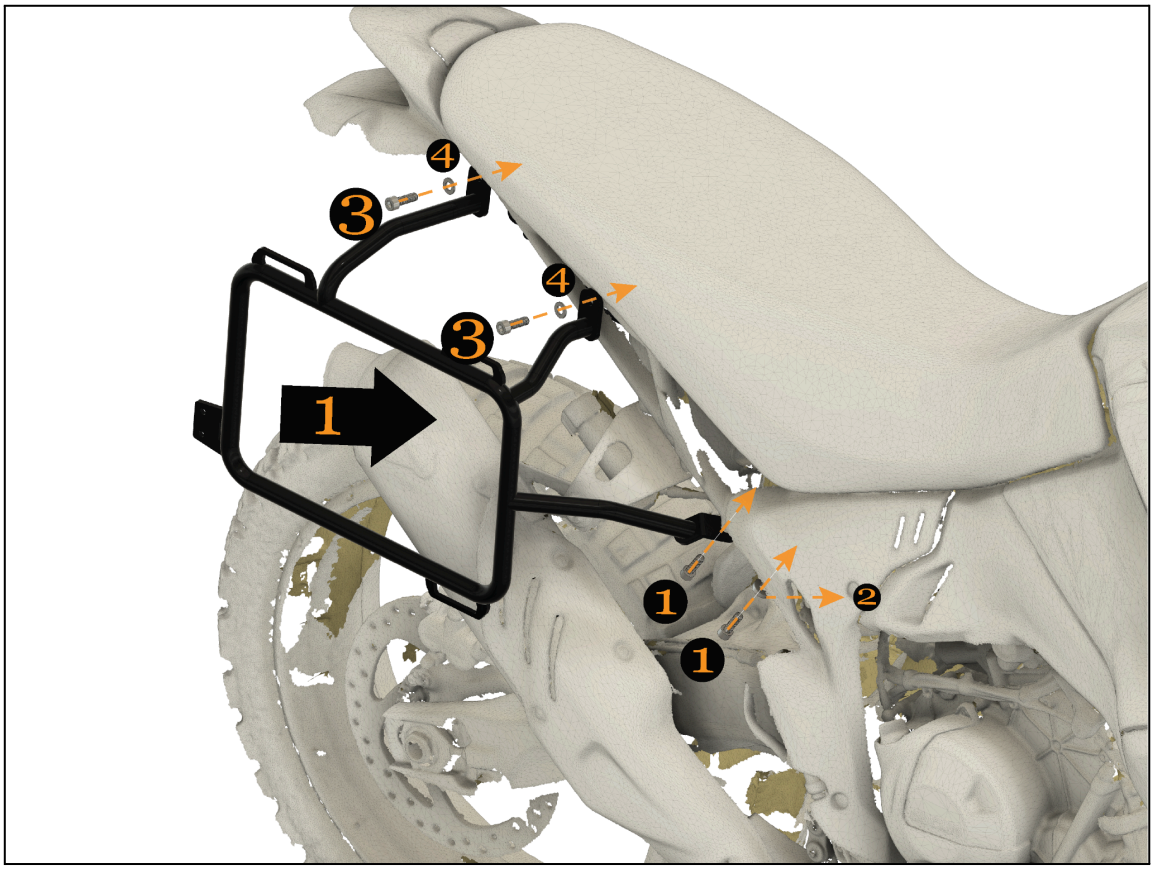

STEP 3 (Install Cross Brace) :

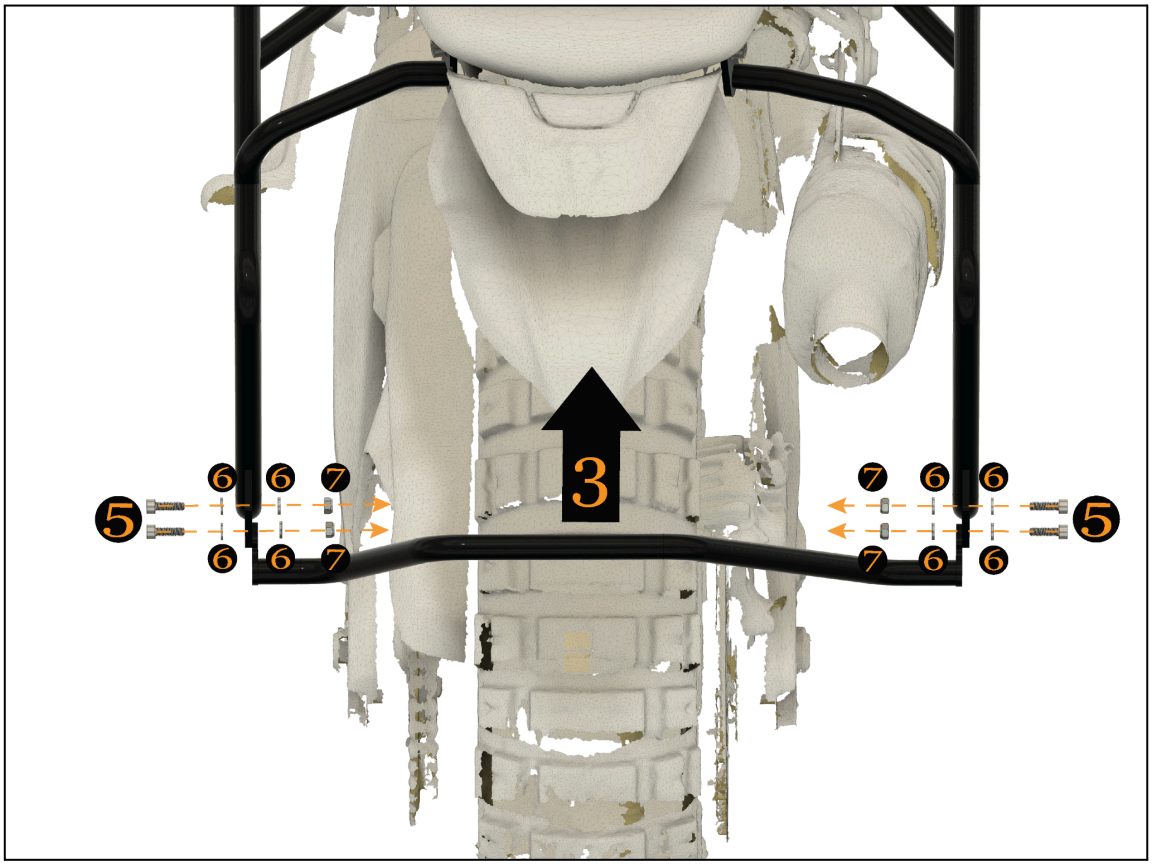

STEP 4 (Installing Pannier Racks With Rear Rack Combo) :

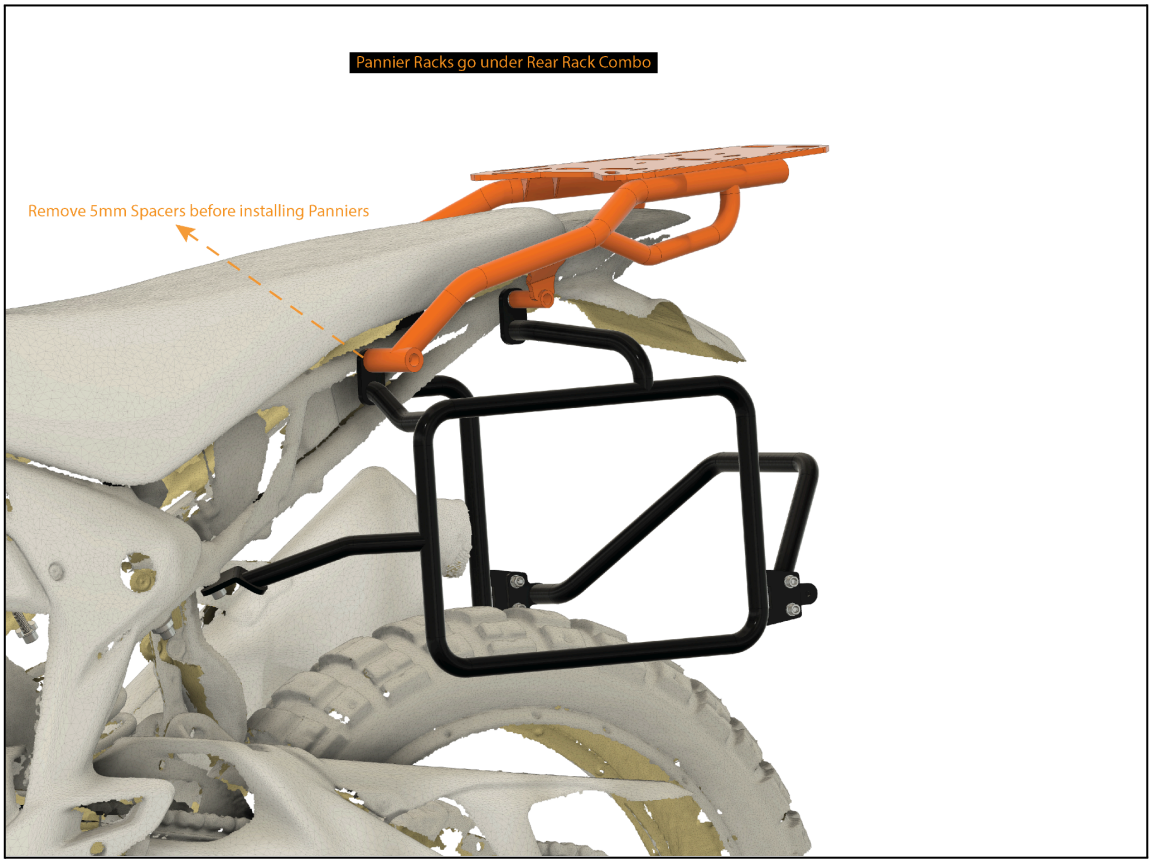

**** Torque Disclaimer ****

Torque specs provided by Outback Motortek are for guidance only and may reference OEM data. Incorrect torque application from miscalibrated or improperly stored torque wrenches (which can drift by up to 20% within 12 months) may cause broken studs or mounting failures. Always return torque wrenches to 0 ft-lbs when storing, and use blue Loctite (medium strength) on all fasteners to help prevent loosening. Outback Motortek is not responsible for damage or failures caused by mis-torquing or improper installation.